

Remote Controls

Directors should unplug and turn the remotes on. This way the coaches / Parents Only need to enter the score / outs and innings

- After you take all the remotes off the charger wait about 15 seconds it should say Resume game. If so press the **ON** bottom in the bottom Left corner. If the remote has balls / strikes / outs etc on the screen you are good to go. Put back in White carton for keys to go in when taken. Please put on top of 12 pks so people can Reach them. If Rookie or lower age is on the Field no need to turn sign on that field.
- To turn the scoreboard off if the people do not. Hold the (off) key down for 5 second or until the remote says powering down, when it says that take your hand off the remote The scoreboard takes about a minute to turn off after the remote says powering down. Plug all the remotes back in. The remotes will turn back on when plugged back in. Just leave them on the scoreboards will still be off.

If a scoreboard will not turn off just click the switch in the back of the scoreboard
And let me know

Call me for any help 425-3472 hm. Cell 734-0657


The remote should be ready to use when you pick it up
 These are the only keys you should touch.

Coaches / Users

Coaches / Users

score ←

→ score

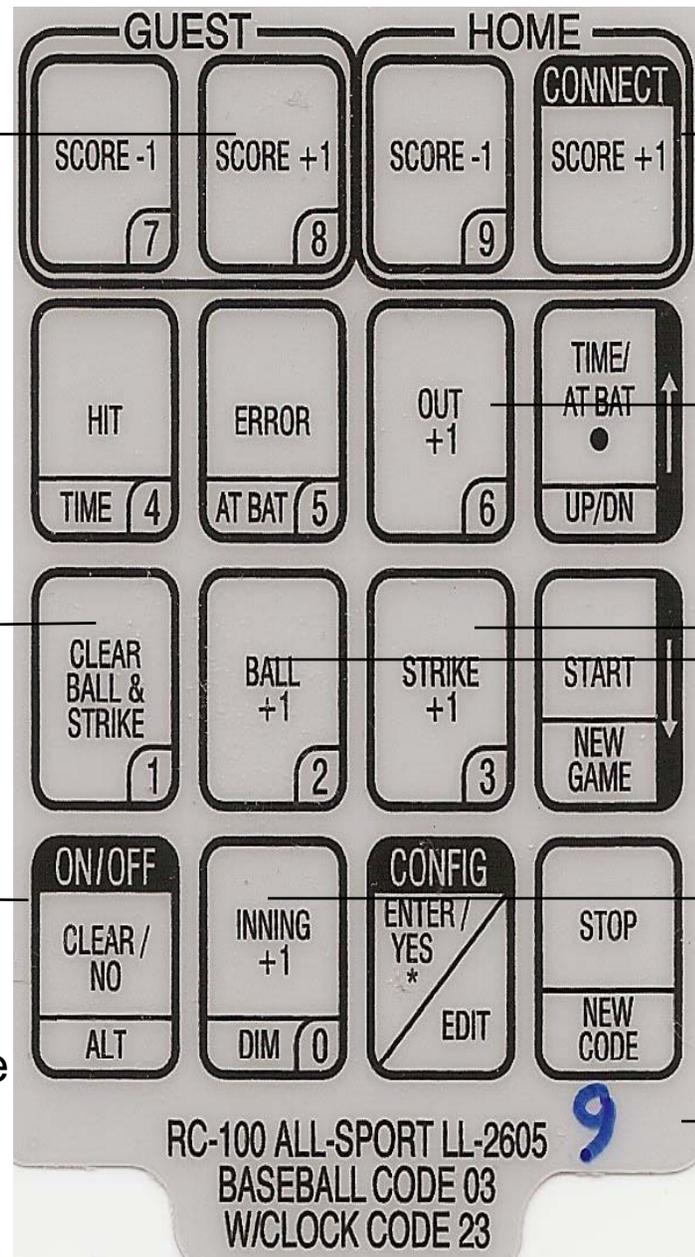

→ outs

← Clear all
Ball & strikes

→ Strikes / Balls
optional

Monday – Friday
 When game is done
 Hit off button for 5
 Seconds until Powering
 Down sign comes on.
 Then take finger off. The
 Sign takes a minute to
 Turn off. Saturday and
 Sunday leave on

→ Innings

→ Field #
For remote

RC-100 ALL-SPORT LL-2605
 BASEBALL CODE 03
 W/CLOCK CODE 23