

DAKTRONICS 5000 REMOTE SCOREBOARD OPERATION

INSTRUCTIONS FOR LACROSSE USE:

Starting the Unit:

- Ensure “soccer” card is inserted in key pad area (not “lacrosse/hockey” card).
- Plug unit in to power source.
- Turn unit on with switch in back.
- Unit will prompt “resume game” in display – press “clear/no”.
- Unit will prompt “select code 7601” – press “enter”.
- Unit will prompt “broadcast 1 – channel 2” – press “enter”.

To Set Time:

- Select “main clock”.
- Press “1-2-0-0-0” then “enter” for boys. Extra “0” is necessary to display time of 12:00. Press “2-5-0-0-0” for girls then “enter”. Again, extra “0” is necessary to display time of 25:00.
- Press “half +1” to indicate first half (small football shape will appear next to guest score). Press again at beginning of third quarter for boys (or second half for girls) and small football shape will now appear next to both scores.
- Press “start” or “stop” to activate game clock as needed.
- Set appropriate time for half time. For boys set “1-0-0-0-0” for a ten minute half. Girls half times vary so set as needed, always remember the extra “0”.
- If desired, the clock can be set to count down to the start of the game. A ten to fifteen minute countdown should be sufficient. Simply use above procedures as needed.

To Adjust Scores:

- Simply press “score up” on either home or away team as goals are scored.

Time Outs:

- Press “time out on/off” then “enter”. Time outs are already pre-set to 2 minutes. Note – once you press “enter” the time out will immediately start counting down. A horn will sound at 20 seconds remaining and at the end of two minutes. Once the time out has expired the game clock will return to the previous setting. Resume pressing “start” and “stop” as needed.

To Display Quarters (halves for girls):

- Use “guest side” of key pad.
- Press “penalty kicks” “plus” or “minus” for proper setting.

Auto Horn:

- The unit should be pre-set to sound the horn at the end of each quarter (or half for girls). A small light will be on if it is. If not, press “auto horn” then “1” then “enter” to activate.

Storing the Unit:

- Please ensure that the unit is packed in the hard case and locked in the cabinet inside the press box after use.