

Norwich Rink Game Clock Operating Instructions (All Sport 5000 Series)

Hockey Games

- 1) **Start a new game:** Press the **MENU KEY 2 times (black key to the right of the number keys)** - you will see this question appear on the LCD screen "Start a new game?" Hit the "**ENTER/* /YES**" **KEY**.
- 2) **Set warm-up time:** Press **SET MAIN CLOCK KEY** and enter time for a **3:00:00** minute warm-up then press "**ENTER/* /YES**" **KEY**. Start the clock once both teams are on the ice warming up.
- 3) **Set period minutes:** At the end of the warm up press the **SET MAIN CLOCK KEY** and enter period time (ie **12:00:00, 15:00:00, etc**), then press "**ENTER/* /YES**" **KEY**.
- 4) The **clock start and stop** is controlled by buttons on the far right. The Horn will automatically sound when the time runs out for the end of the period.
 - a. For Cross ice games, you will need to **stop the clock** and press the **horn button** after every 2 minutes of play so the players can change. Then when they are ready to play again hit the **start button** to re-start the clock.
- 5) To **change the period**- press the **Period +1 key** located to the left of the Red keys.
- 6) To **enter a score**- press **Score +1 key** (Green for Home; Red for guest).
- 7) To **enter a penalty**- Press the **Player Penalty button** (either Green for home or Red for guest). Enter the player number and the length of time of the penalty and press enter. Note, the clock can handle multiple penalties (more than just the two that will be displayed on the clock) for a single team.
 - a. If you need to **delete a penalty**- press the delete penalty button (either Green for home or Red for guest). If more then one penalty is on the board for a certain team and you need to delete one of the penalties, the penalties are numbered 1, 2. The LCD screen will ask you a question as to which penalty you want to delete. Just follow the prompt and delete the one you wish to delete.
 - b. **NOTE:** if a penalty is carried over to the next period, the LCD screen will prompt you with a question if you want to adjust the penalty. Press the **CLEAR/NO KEY**.
- 8) To return to Time of Day (TOD) at the end of the game, press main menu/push the up arrow and it will ask if you want to change to TOD; enter yes and the number 1 enter and then the number 2 enter and that should display the TOD on the board.